

Without written consent, any part of this user manual should not be used or re-published in any way. All the products and companies mentioned in the user's manual belong to their own proprietor. Specifications are subject to change without further notice! The user manual is for reference only; please refer to the product for actual operations.

COPY RIGHTS © 2014 ALL RIGHTS RESERVED.

Captur Infotainment System





I. Multimedia	01
Quick Guide	01
1. Overview	01
2. Home Screen	02
3. Scroll Down Menu	03
Applications & Features	04
1. Phone	05
2. Radio	10
3. Music	11
4. AUX	14
5. Gallery	15
6. Settings	16
7. Audio Settings	25
8. File Manager	27
9. Calculator	28
10. Browser	29
11. Calendar	29
12. Linkpod	30
13. Waze	31
14. Twitter	31
15. Adobe Acrobat	32
16. Voice Search	32
17. Foursquare	33
18. Instagram	33
19. YouTube	34
20. TuneIn Radio	34
21. Joox	35
22. Google Setting	35
23. Phone-Link	36
24. Voice Assistant	43
25. Navigation	44
26. Specifications	48
27. Care and Maintenance	50



Note:

Please read this manual and any other info included, prior to using this product.

It is important to be aware of the warnings for the safety of all users and the device.

- DO NOT setup or make any setup changes while driving vehicle. Make sure vehicle is stopped and parked safely before entering any set up info or changes.
- It is illegal and unsafe to play any video that may be viewable by the driver in most regions. Please obey all rules and regulations.
- Navigation is for reference only. Routes, reception, and road conditions may change without notice.
- Do not attempt to install or repair the device. Installation and repair of device is dangerous and should not be attempted by anyone other than an authorized installation or repair center.
- Do not touch the screen with sharp objects. Do not press against the screen with hard objects. Doing so will damage the screen display or touch screen.
- To ensure the device works normally and to prevent damage, do not expose the device to extremely damp air or liquids of any kind.

Insert MicroSD Card in correct direction. Do not insert foreign object in the card slot.

It may damage or cause electric shock to the product.

I . Multimedia

Quick Guide

1. Overview




1. Power key
2. Back / Exit key
3. Home key
4. Volume – key
5. Volume + key
6. Reset slot
7. Micro SD card slot
8. USB port
9. Aux port
10. Touch Screen Area

2. Home Screen

The home screen is the starting screen. Waze, Spotify, Phone, Radio, Music, Apps shortcut are displayed on the home screen. Tap any icon to go to the corresponding application page.

To return to home screen press the button on the front panel/screen.

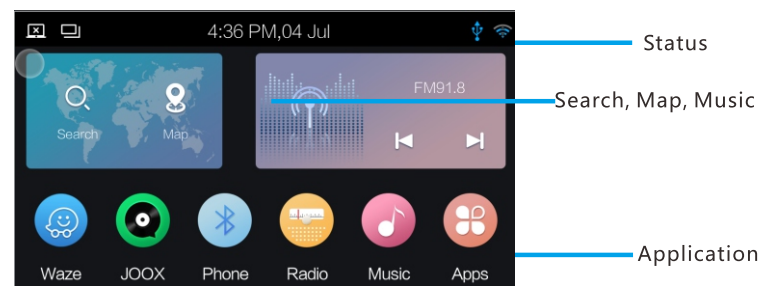


Switching apps

Click icon to access the list of recently used apps.

Click a thumbnail to open recent apps.

Swipe left/right on a thumbnail to close the corresponding application.

Click icon to close all apps.

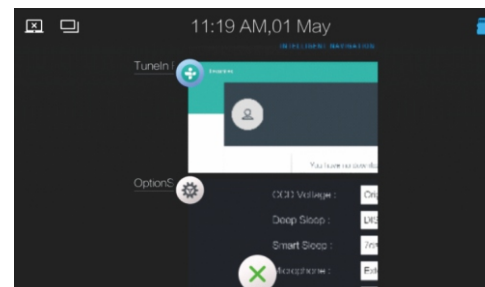



Screen off/on

Click  icon, the screen turns off. Click any point on the screen will turn on the screen automatically.


Click  icon, will return to previous screen.

3. Scroll Down Menu


Drag the status bar down to open the scroll down menu.

To close, press  icon.

Default quick functions: Wi-Fi, Mute, Hotspot, Reboot, Settings, Voice assistant and Volume +/-.

Customize quick apps: Press  icon to select desire function from the list.

To replace selected quick apps, press and hold the icon.

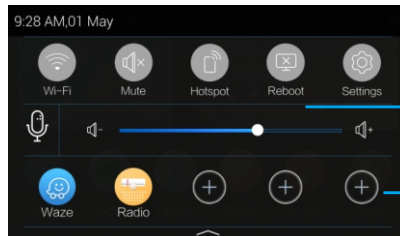


Default quick function

Customize quick apps


Applications & Features

Application List


Press  to enter application page.

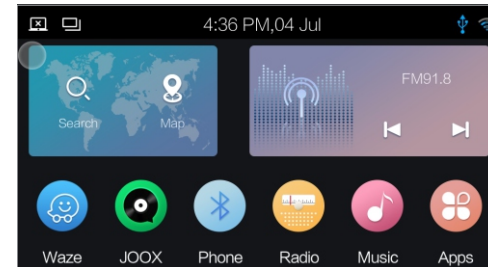


Apps Shortcut

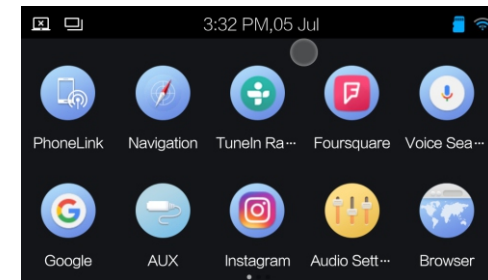

 Swiping left or right for the next or previous page

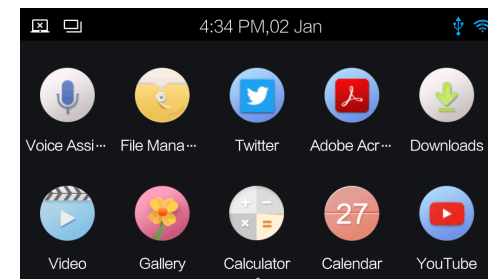

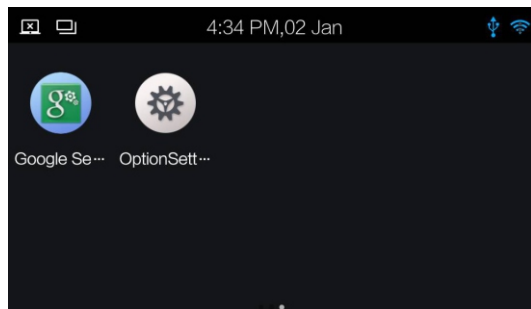

1. Phone



To pair the system with a mobile phone and to use the hands-free function via Bluetooth technology.

Note: The Bluetooth communication range is approximately 5 meters.

■ Pairing the telephone

- Turn on mobile phone's Bluetooth function.
- Tap Phone on Captur multimedia system Home Screen.
- Tap 'New Devices' to search for your device and select the correct device name.
- On your mobile phone enter the pin code 0000 to pair to Captur multimedia system.

■ Dial or Answer a Call

 
Using Bluetooth function to dial, receive and reject calls.

Note:

1. Please ensure the mobile Bluetooth has been connected with the Captur multimedia system.
2. Multiple calls are not support for this device.

Dial a Call using Keypad

1. Enter the number on the keypad, and then tap  dial.

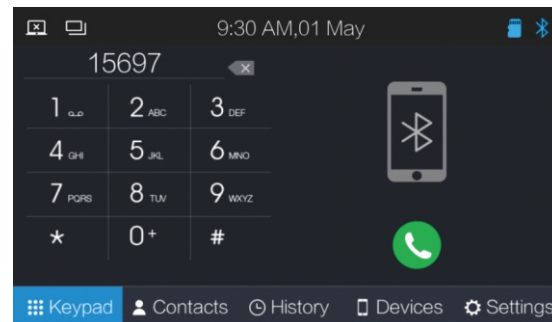


Dial a Call from Contacts

1. Tap 'Contacts' function, search from contact list.
2. Tap on the contact name to dial.

Answer a Call


Tap dial icon to answer an incoming call. 

Tap the decline icon to end/decline a call. 

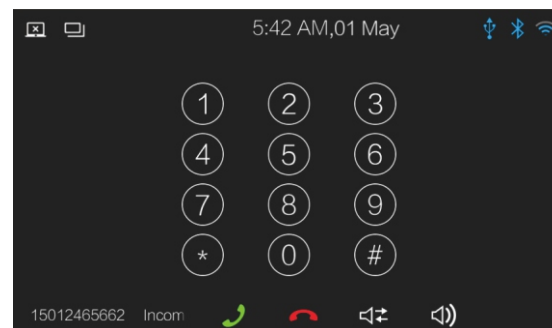

Switching the Call


During the call if you want to switch the audio from car speakers to mobile speaker tap icon.

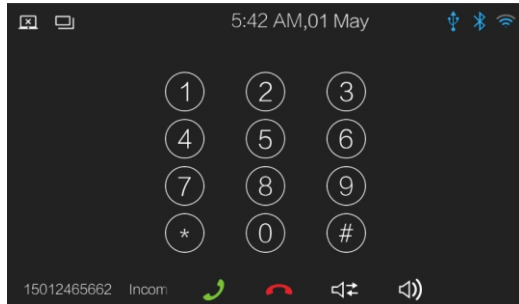

Contacts

Contact list will be synchronized to the system when you tap icon. After the phone book stops updating, you can see all the contacts here.

To add new contacts Sync Address Book again by tapping icon.

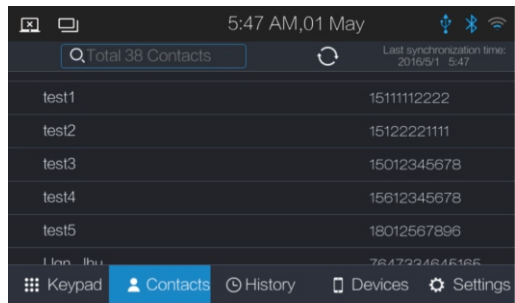


History

All Call, Missed Call, Dialed Call and Received Call records will be synchronized to the navigation system when you tap “ ” icon.

All Call

Tap the All Call icon to view missed call, dialed call and received call records.

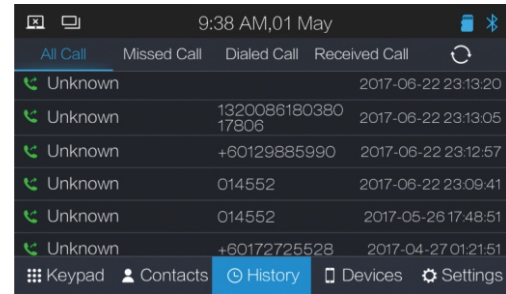

Missed Call

Tap the Missed Call icon to view missed call records.

Dialed Call

Tap the Dialed Call icon in the History of Phone interface to get dialed call records.

Received Call

Tap the Received Call icon in the History of Phone interface to get received call records.

Devices


View paired Bluetooth devices and new devices.

•To search a new device, tap .

•To connect a new device, search the device name as shown below from your mobile phone and select the name. Pin:0000


- To reconnect a device, select the device and tap
- To disconnect, select the device name and tap
- To delete a device from list, press

Note: You can also slide left to disconnect or delete the device.

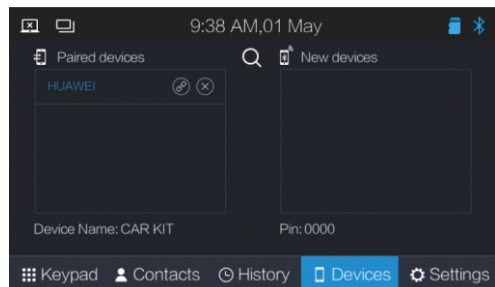


■ Settings

 Enter settings page in the Phone interface to view or modify the device name and Pin code.

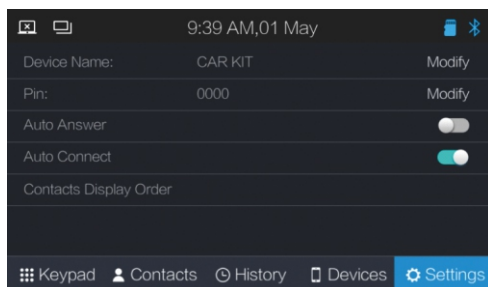

Note:

 
- Auto Answer: Incoming call will be answer automatically if turn on.
- Auto Connect: Previously paired mobile phones will be connected automatically if turned ON.
- Contacts Display Order: Tap to change the display interface, first name, last name or last name, first name. After change, please download the phonebook again.

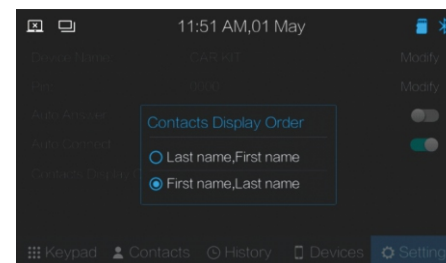





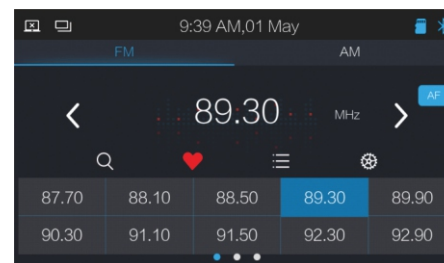


2. Radio

■ Listen to the radio

–Tap the Radio icon on the home screen to listen to the Radio.



■ Icon function

-  Tap once: decrease 0.1 MHz
Touch & hold: scan previous station
-  Tap once: increase 0.1 MHz
Touch & hold: scan next station
-  Tap it to Search All available radio stations.
-  Tune to desired radio frequency; tap this icon to save in the list.
Note: To remove/delete from list, press this button again.
-  Tap it to view scan result. User can select or save all the stations.
-  Tap to select radio station region and RDS function on/off.
-  Tap this icon to enable or disable AF (Alternative Frequency) features.


3. Music













Listen to your favorite music in the music player.

 
The system will scan all the music files in iNand and SD/USB device and automatically add them to the playlist.

■ Play music

1. Tap Music application to enter the music interface.
2. Tap iNand, SD, USB, Linkpod or BT Music .
3. Tap  to select song / Press play


Control playback with the following icons:

-  Tap once to go to previous song.
Touch & hold for fast rewind.
-  Pause playback
-  Resume playback.
-  Tap once to go to next song.
Touch & hold for fast forward.
-  View all song (iNand/SD/USB)
-  View current playlist
-  Search for song title
-  Save as favorite
-  Sequential play/Repeat current song/Repeat all songs/Shuffle on
-  Audio setting (refer to page 25)

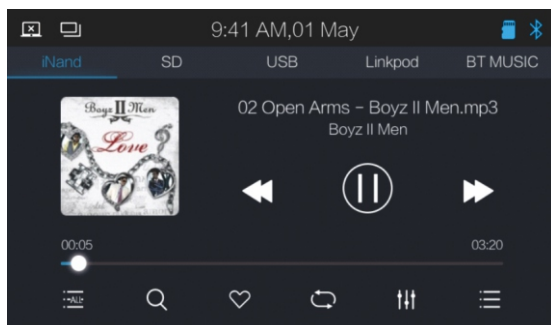


Music Management – Create Playlist

 1. Tap to see the current playlist.
2. Tap a music file to play or choose “Play All” to play all songs.

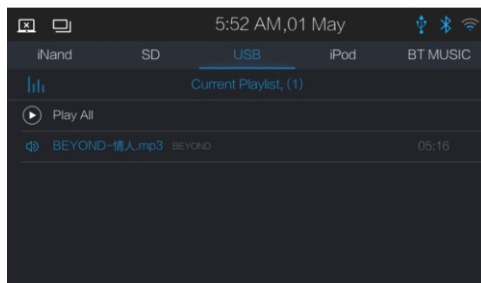

Music Library

 1. Tap to enter the Music Library (Playlist, Folder, Albums and Artists).
2. All songs are sorted by Playlist, Folder, Albums and Artists, choose the desired song in this library to play.
3. In Playlist, you can find the songs from iNand, USB, SD card, iPod, BT music or from your favorite songs list.

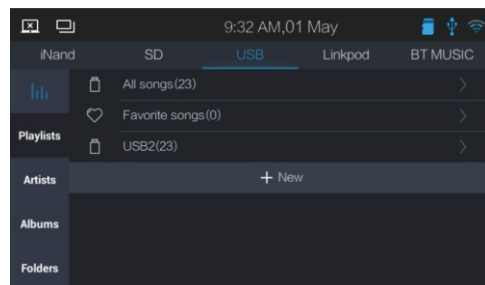


4. AUX



■ Activate/Deactivate AUX Function

 1. In the application list, tap AUX.
2. If you want to exit or stop listening to the audio from the device, tap and exit.
3. If you want to adjust the audio effect, tap Audio Setting and select your favorite effect. For details refer to page 25.

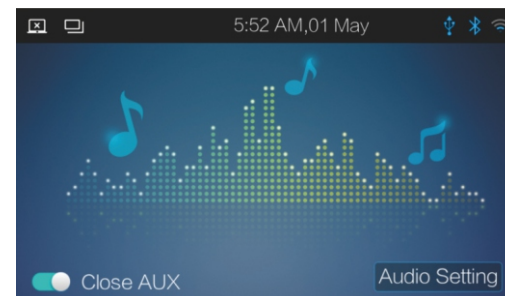

5. Gallery

 


Tap "gallery" to view photos, run a slideshow and set photos as the wallpaper.

You can view pictures via iNand, SD or USB.

 
■ View a photo

1. Tap "Gallery" in the applications list.
2. Tap a source (iNand, SD or USB)

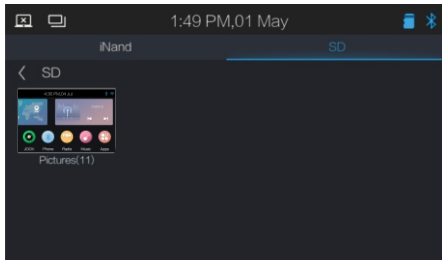





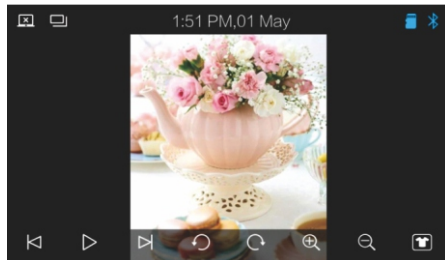

3. Tap a photo to view.

You can slide right or left or tap  or  to view the pictures.



 
■ Icon Function

-  **View Previous:** View the previous picture
-  **View Next:** View the next picture
-  **Rotate left:** Rotate a photo anti-clockwise
-  **Rotate right:** Rotate a photo clockwise
-  **Slide show:** Start a slide show in the selected folder
-  **Wallpaper setting:** Tap it to set the picture as wallpaper

6. Settings




Tap "Settings" in the application list page to adjust Network/ General/ System/ Other.

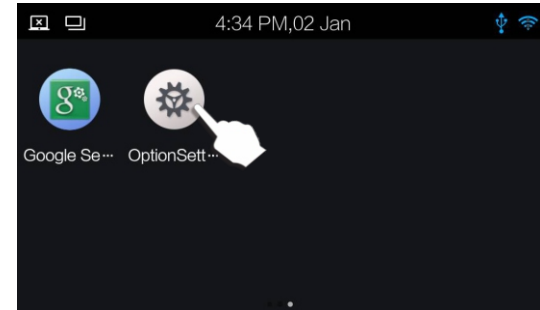


Network

 Tap Network in the setting interface to select Wi-Fi or portable hotspot features.

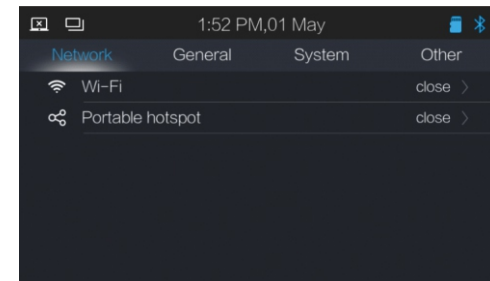


Wi-Fi function

 1. Tap Wi-Fi or hold Wi-Fi button in the scroll down menu to enter the Wi-Fi setting interface.
2. Press button on the top right side to turn on/off the Wi-Fi function.

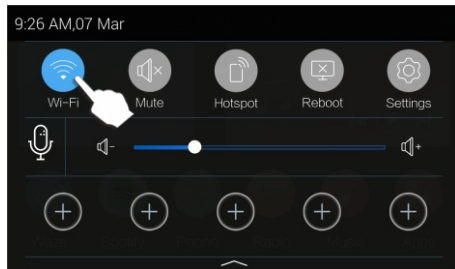


 
3. When Wi-Fi is turned on, your device will automatically scan for available networks and display them.
4. Tap the network you want to connect to. When you select an open network, you are automatically connected to the network. Otherwise, enter a password to connect.

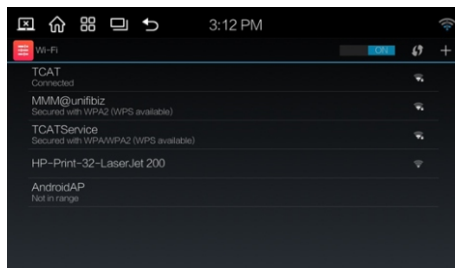

Portable hotspot function


1. Tap to enter the Portable hotspot interface.
2. Tap "Portable Wi-Fi hotspot" to turn it on/off.
3. Tap to set up Wi-Fi hotspot.

  Note: select show password to view the default password.

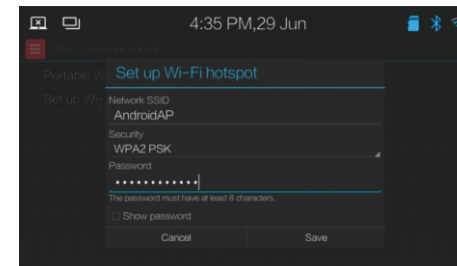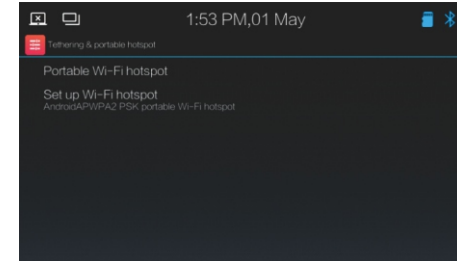

General

 
View/Modify day/night brightness, date/time, language and assistive touch.

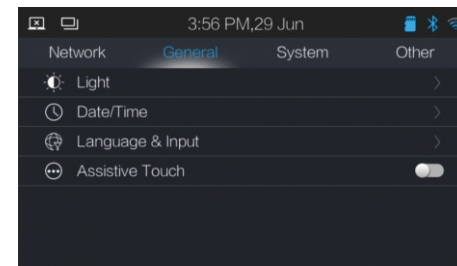

Light

1. Adjust the brightness by sliding the bar on the screen.

 
Note: Turn on the illumination light to adjust brightness for night.

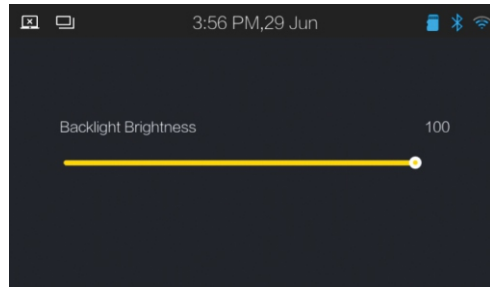

Date & Time


1. Manually set the date, time, time zone and time format.

 Note: Date/Time will be update automatically once received GPS signals.

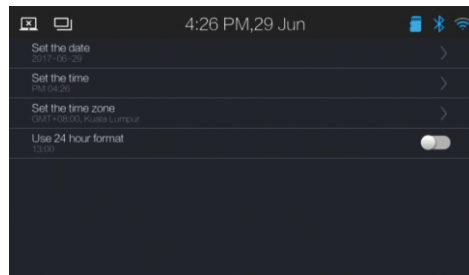

Language & input

 
Tap "Language & input" to enter and modify the language & input.

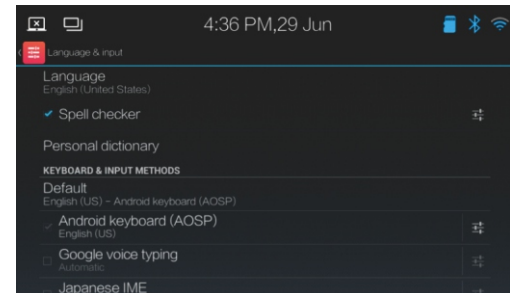

Assistive Touch

1. Tap to turn on the Assistive Touch.

 2. There will be five quick icons: Mute, Home, Back, Voice Assistance and Volume when you press on transparent round icon.

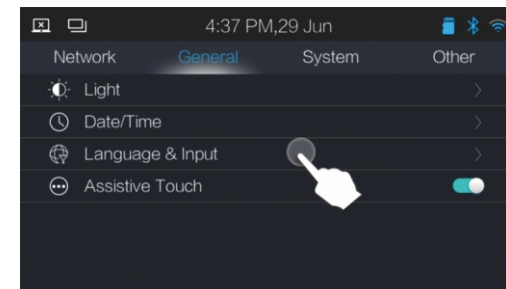




System

Tap to upgrade the system, reset devices to factory defaults or view device information and version.

Caution: reset to factory mode will erase all the system data and account.




 About device

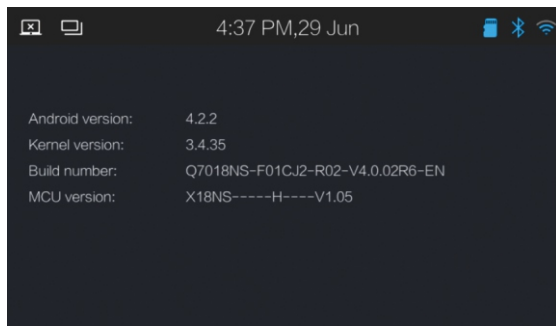

Other

 
Set the CCD, Apps, Location access, Default navigation, Application data or Advanced.

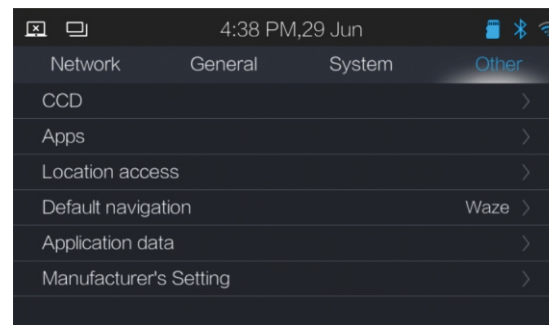

CCD

1. Tap to turn on/off the Pause Media While Reverse.
2. Tap to turn on/off the CCD Camera.
3. Tap to turn on/off the Reverse Camera Guidelines.

 Note: Pause Media While Reverse may not available or support for some apps.

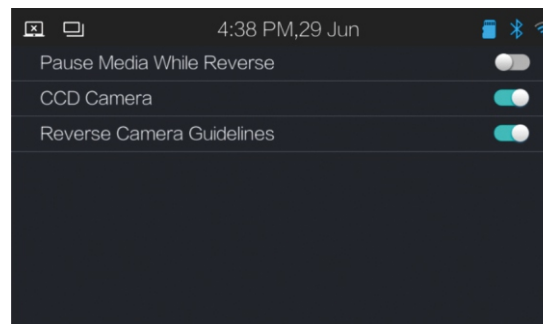


Apps

1. Tap "Apps" to enter the manage apps interface.
2. Slide to left to view downloaded and running apps.

Caution:

Preloaded apps cannot be uninstalled

 
Force stop an application may cause devices unstable or application error.

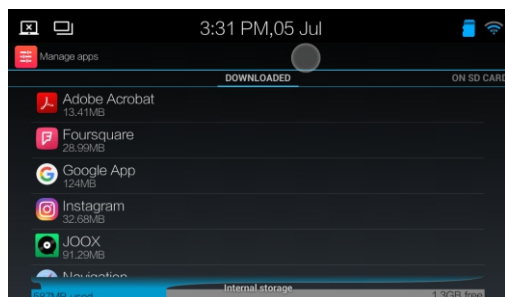

Application data


1. Tap "Application data" to enter the Application data interface.
2. Available space for data and files.

 Note: Please delete files or clear data if insufficient space.

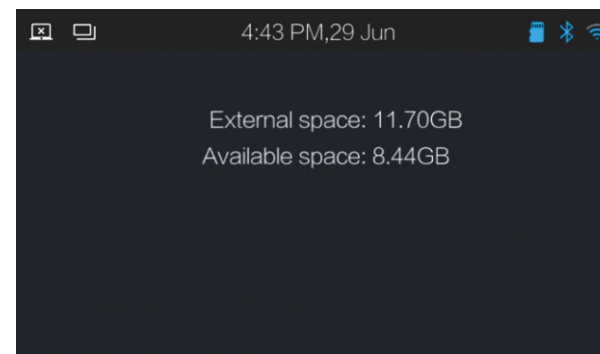

Location access

 Tap "Location access" to enter the location access interface.

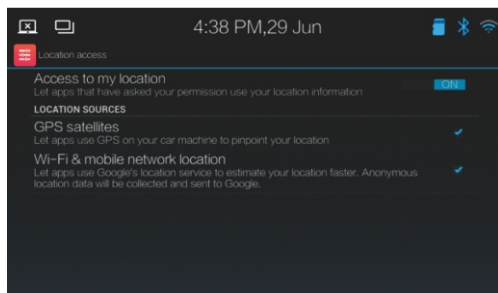

7. Audio Settings



Tap "Audio Settings" in the applications list to enter the Audio Settings interface.



EQ

1. Tap "EQ" in the audio setting menu to display the 10 bands EQ and preset EQ settings.

2. You can select desired band or adjust manually.

Note: EQ may not available or support for some apps.



Speaker

1. Tap "Speaker" in the audio setting menu to display the speaker settings.
2. Adjust the sound of the speakers by sliding the bars.
3. Adjust the treble, bass or turn on/off the surround sound.
4. Tap the "Reset" button to return to the default settings.



Sound

Tap "sound" in the audio setting menu to display the advance settings.

1. Adjust the volume for sound and audio playback.

Master Volume - Primary volume control for all function and apps

Bluetooth Call - Caller volume

Bluetooth Ring - Ringtone volume

 
Navigation - Navigator apps volume

Media - Multimedia apps volume



8.File Manager

Tap “File Manager” in applications list to enter the File Manager interface.

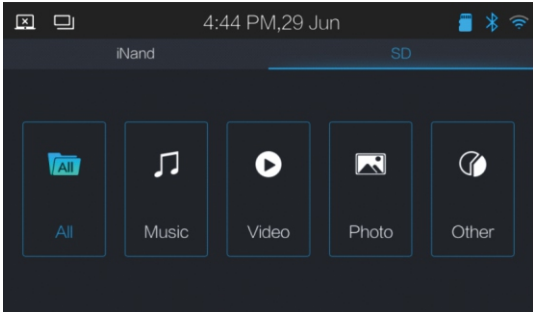

You can also do operations such as Copy, Paste, Rename, Delete, and Create a new folder.



9. Calculator



 
Perform mathematical calculations directly on your device like a hand-held or desktop calculator.



10. Browser



Surf the internet using the browser.

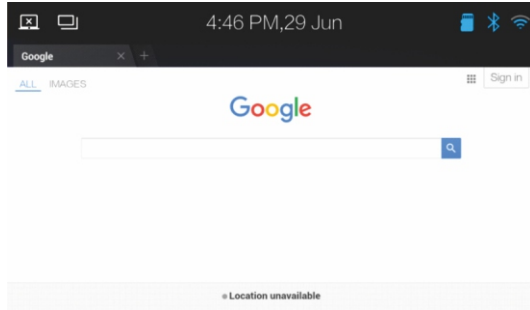


Note: Connect to a hotspot network with internet data connection to use the app.

11. Calendar



 
Tap the calendar icon in the application list to use this function.

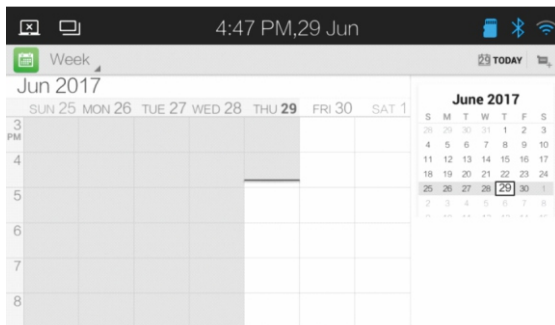


12. Linkpod

In the application list, tap music to enter the Linkpod interface.

 –Connect your device to Captur multimedia system with phone cable.

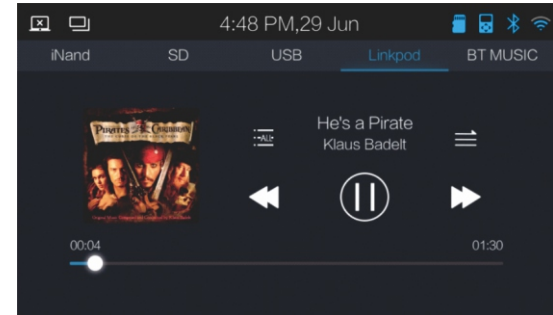

 Use the Audio interface to check the Playlist, Artist, Track, Album, Composer, Audiobook and Genre.

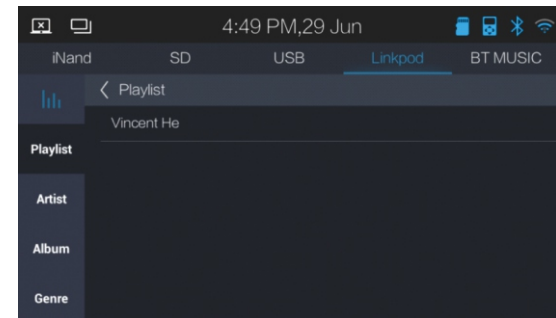


13. Waze




Note: Connect to a hotspot network with internet data connection to use the app.

 14. Twitter

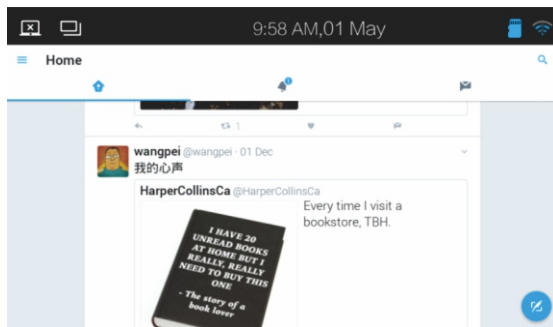

Note: Connect to a hotspot network with internet data connection to use the app.

 
15. Adobe Acrobat

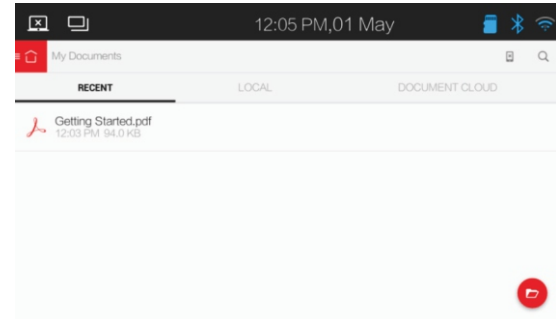

16. Voice Search



 Quickly search your phone, the web, and nearby locations by speaking, instead of typing. Call your contacts, get directions, and control your phone with Voice Actions.

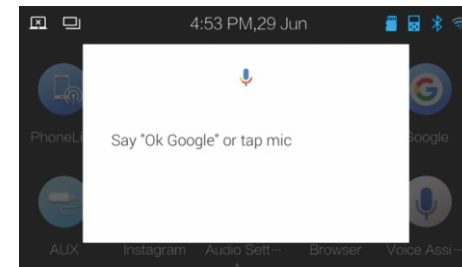

Note: Connect to a hotspot network with internet data connection to use the app.

17. Foursquare



 
Note: Connect to a hotspot network with internet data connection to use the app.

18. Instagram




Note: Connect to a hotspot network with internet data connection to use the app.

19. You Tube

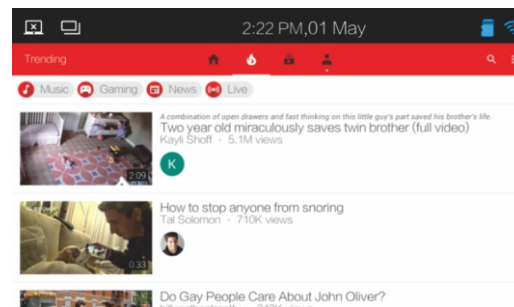


Note: Connect to a hotspot network with internet data connection to use the app.

 20. TuneIn Radio

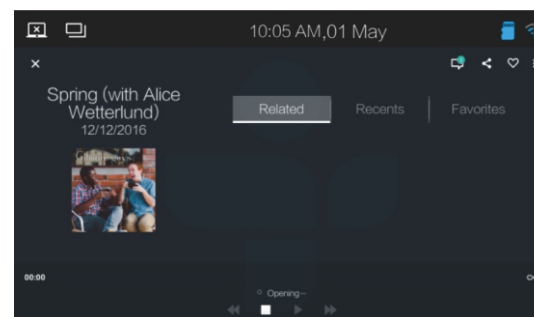

Note: Connect to a hotspot network with internet data connection to use the app.

21. JOOX

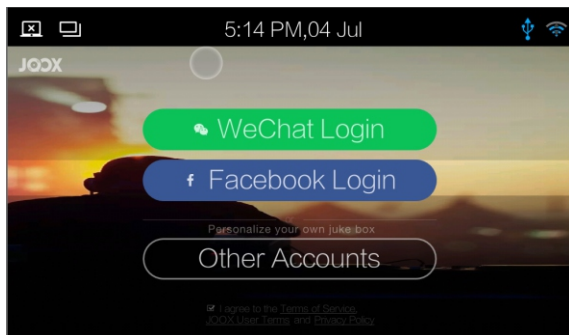

Note: Connect to a hotspot network with internet data connection to use the app.

22. Google Setting



23. Phone-Link

Phone-Link achieves the effective connection between Smart Phone and Captur Multimedia System.

1. Connect Android Phone through USB Cable:

Please ensure that "USB Debugging" mode is enabled in your mobile Phone.


Note:

If "USB Debugging" mode is not enabled in your Mobile Phone, then please follow the below steps to enable it:


→Go to your Mobile Setting and tap "About Device" by continuously pressing "Build Number" to enable "Developer Options".

→Now go back to settings menu and tap "Developer Options" to enable the "USB Debugging".


Connect your Android Phone with Captur multimedia system through USB cable and you will see the below option on your Android Phone screen. Tap "Always allow from this computer" and press OK.

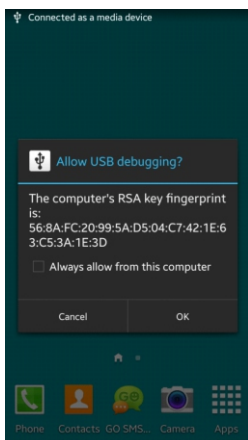

 Open the "Phone-Link" application in Captur Multimedia System and tap "Android USB" to connect the Android Phone. (As shown in picture)

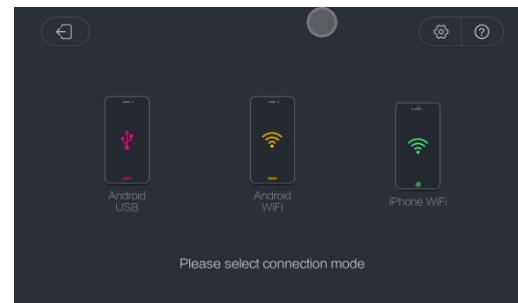


 Now your phone is connecting..... (As shown in picture)

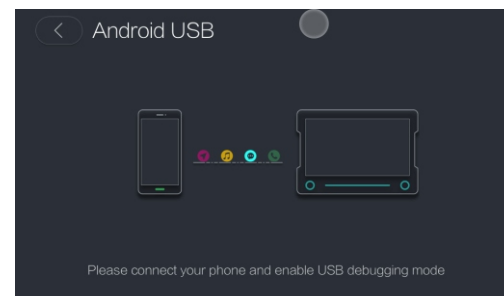


When the Android Phone is connected with Captur Multimedia System, "Drive Mode" application will be installed automatically in your Android phone.

 Drive mode application will run on your Android Phone and Captur Multimedia System automatically. (As shown in picture)

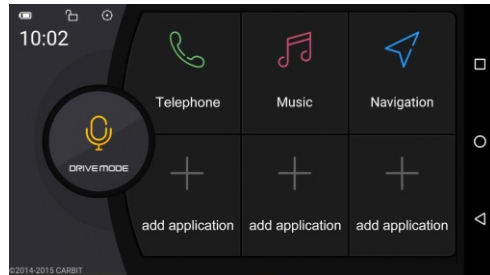

To exit from "Drive Mode" press back key from your Android Phone. Your Android Phone screen now will be mirrored on Captur Multimedia System.


Note: To enable "Drive Mode" option tap "Drive Mode" application through your Android phone.

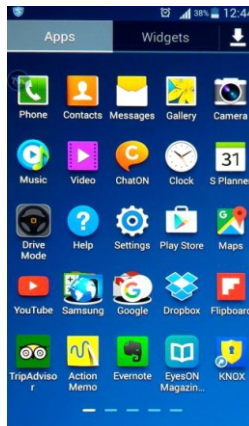

2. Connect Android Phone through Wi-Fi:

If you want to connect your Android Phone through Wi-Fi, then you should follow Step 1 "**Connect Android Phone through USB Cable**" (Only one-time requirement).


Make sure that your Android Phone and Captur Multimedia System is connected on same Wi-Fi network. Open "Phone-Link" application in Captur Multimedia System and tap "Android Wi-Fi". (As shown in picture)

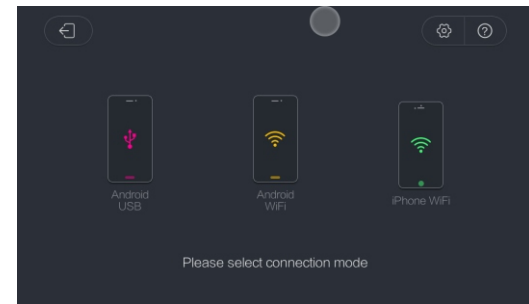

Now your Android Phone is connecting.....(As shown in picture)



When your Android Phone connects with Captur Multimedia System you will see "Drive Mode" application screen on Android Phone and Captur Multimedia System.

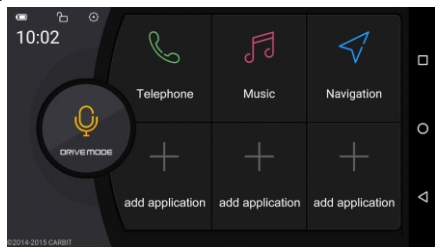


To exit from "Drive Mode" press back key from Android Phone. Your Android Phone screen now will be mirrored on Captur Multimedia System.

Note: To enable "Drive Mode" option tap "Drive Mode" application through your Android phone.


3. Connect iPhone through Wi-Fi

Open your iPhone "HOTSPOT" and connect Captur Multimedia System with it.

Open "Phone-Link" application in Captur Multimedia System and tap "iPhone Wi-Fi". (As shown in picture)

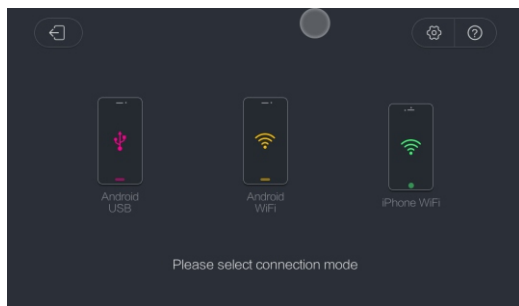

Swipe up on your iPhone screen and tap AirPlay. (As shown in picture)

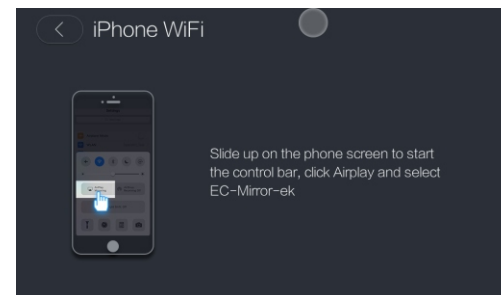

Tap the device name and turn on Mirroring.

Now your iPhone has been connected and you will get your iPhone screen on Captur Multimedia System.


Note:

Please make sure that your Smart Phone Bluetooth is connected with Captur Multimedia System for Audio Playback.

24. Voice Assistant




Voice Assistant is a feature that allows the users to control the system by voice commands. The user only needs to activate it and give a command to make the system do the right operation.

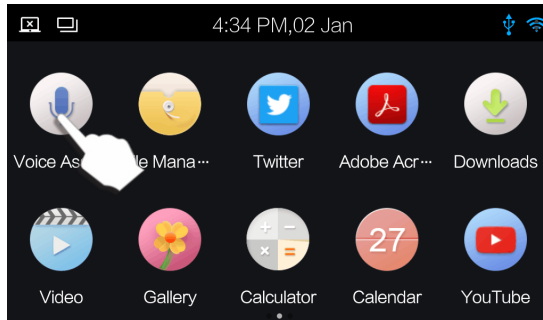

Activate the Voice Assistant

Tap Voice Assistant in the application list to activate the Voice Assistant feature. Then a voice saying "Can I help you" will be heard. You must give a command from the list given or the system will say "Time out" and exit.

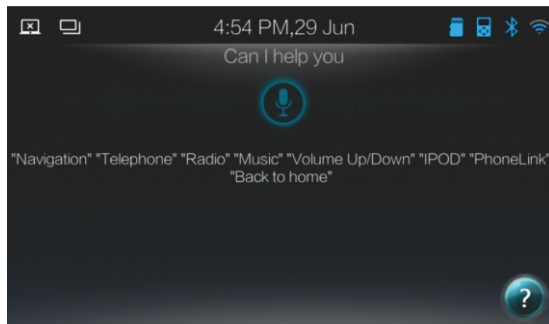

Say a Command

Say a command to make the system do the operation for you. In different modes, you can choose the words listed in the Voice Assistant application. If a command is not included in the given list, the system will not recognize or will cause a wrong operation.

Caution: Working of Voice Command depends on user's accent and environment.

25. Navigation



Navigation app for searching locations and navigating to places even when offline. With connectivity, users can search online for more and accurate results and update the map database.



 


■ Search

Using 'Search' function to search for location, roads and etc and then select the desired result.


If not results appear, press 'Search Online' to search for more results.

(Note: Internet connectivity is require)

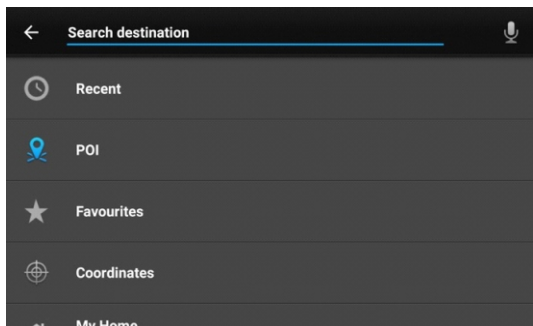


■ Filtering

To filter the result list by category (POI, Address, Roads) or location (City, State, Country), press the icon at top right corner.

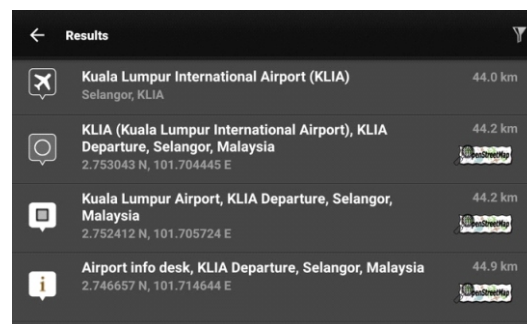


■ Search for Renault Showroom or Service Centre

To search for Renault showroom or service centre, press 'More' then the 'Renault' icon.

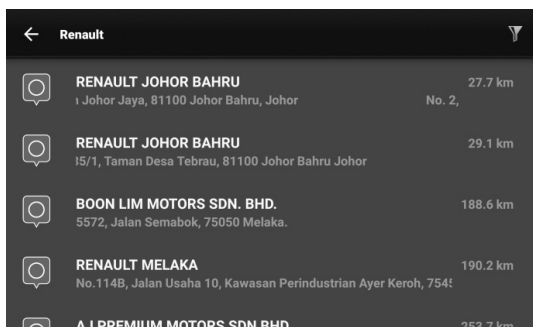

■ Set a Destination

To start navigation, select the desired result then press 'Go'.

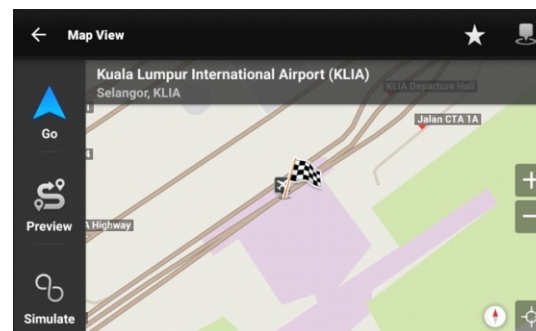



■ To End/Stop Navigation


Navigation will end automatically once user reaches the destination. To stop manually, press the 'X' stop navigation icon at navigation main page.



■ To Select / Update Map


To update map, go to 'Setting' then press 'Map'. Tap on 'Check for Updates' and continue to next step if update is available.

To select map, press the correct map database. User shall select current region to ensure apps work normally.

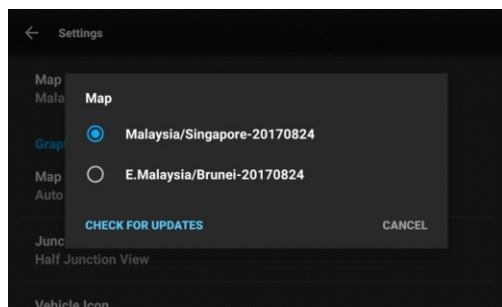

■ About

Information about navigation map service provider, device ID, version and license. Ensure navigation SD Card is insert into the SD card slot and do not remove the card when navigation apps is running.

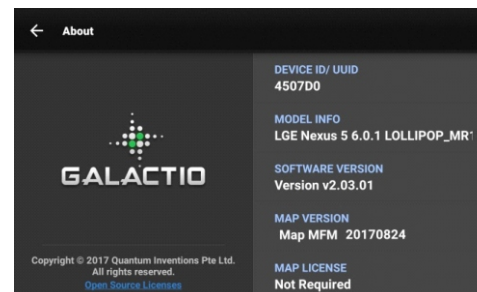

26. Specifications

FM Tuner

Frequency Range	87.5 MHz- 108.0MHz
Usable Sensitivity (S/N : 30dB)	10±5 (Typ 5dB µV)
Stereo Separation	≥27dB (Typ 30dB)

AM Tuner

Frequency Range	531 kHz - 1,620 kHz
Usable Sensitivity (S/N : 20dB)	≤28dBuV (Typ 23µV)
Selectivity	≥40dB (Typ 50dB)



Amplifier

Maximum Power Output	25W x 4ch
	Yes
Audio DAC	44.1kHz/16bit
	Volume/Balance/Bass/Treble/Fader

Hardware

Processor Type	QuadCore
Graphics	Hardware OpenGL ES-CM 1.1 and Open VG 1.1; Support 3D graphic accelerator
RAM	1GB DDR3
Built-in Flash Capacity	16GB eMMC
Operating System	Android
WiFi module	MT5931A/B.TFBGA-84.AUTOCHIPS
Bluetooth module	MT6622N/B.QFN-40.AUTOCHIPS

General

Panel Dimension	241*126.1* 64mm
Net Weight	1.16kg
Head unit Operation Voltage	9~16VDC
Operation Temperature	-20°C~70°C
Storage Temperature	-30°C~80°C

Note: Specifications and designs are subject to change without notice for further improvement.

27. Care and Maintenance

Captur multimedia system utilizes highly precise and sensitive technology and should be used with care. Please follow the following instructions to help you fulfill warranty obligations, and extend the life of your device.

- Keep all parts and accessories away from small children. It is not recommended to allow children less than 12 years of age to operate this device.
- Keep device dry. Exposure to water, liquids, or moisture may cause damage to the vehicle or device, and may cause physical injury.
- Do not expose the device and/or its components to excessive heat. Prolonged exposure to high temperatures will shorten the life span of electrical components, damage internal batteries, and/or warp/melt certain plastics.
- Do not expose the unit and its components to excessive cold. Uneven temperature changes can cause moisture to form inside the unit, or components to break, causing damage to the internal components or screen.
- Do not drop, bump or excessively shake the unit. Doing so may damage the unit and void the warranty.
- Do not attempt to open or disassemble the device. Doing so will void the warranty. If you are having issues with your device, consult distributor or authorized repair facility.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- When using or storing this device, keep it away from electromagnetic and/or radioactive fields/equipment.
- Do not use sharp objects to operate the LCD touchscreen, as it is very easily scratched. To operate, please use the tip of your finger.

Warning:

If you meet the following situations while using the device, this troubleshooting guide is meant to help you solve the problem quickly. If the problems are still not resolved after following this guide, please consult an authorized repair or installation center. Do not disassemble or remove the device! This may void your warranty, and/or lead to personal injury. Some applications in the system are for demo purpose only. User must buy full version online for extended use.

Problems	Reasons	Countermeasures
Startup failure	The fuse may be burned.	Replace the fuse with same rated current.
Touch screen does not work	The system is processing some programs.	Wait for a while. Press reset (RST) switch located at front panel to reboot if still not functioning.
System speed is affected.	Too many applications are running at the same time.	Press switching apps icon at status bar and then close the apps
The screen is black with no images or monochrome when playing video.	Brightness, Contrast or color saturation is adjusted too low.	Readjust the brightness, contrast, color saturation to ideal state for watching.
CCD camera shows no image.	Camera function off.	Camera function off Countermeasures: Go to setting, others, CCD. Turn on the CCD camera function

GPS fails to find the current position	GPS antenna is not connected.	Have a qualified installer check connection.
Blank on the map	Navigation may be set with too large or too small proportional size.	Try to change the zoom ratio to see if it can return to the map display. If it is still not solved, please restart the map application.
Video not playing	Formats not supporting.	Supporting formats are: MP4, MKV, MOV, MPEG-2, XVID.