

Front Cover



VEHICLE SECURITY SYSTEM

WARRANTY & USER MANUAL

NISSAN NV200

TCAT ALARM SECURITY SYSTEM REGISTRATION WARRANTY CARD

NO.

Owner's Name:	Vehicle Registration No.
Tel No:	

Owner's Address:	Delivery Date:
Vehicle Model:	Chassis No:
Engine No:	Serial No:

Selling Branch or Dealer's Name and Address (chop and sign)
--

I have clearly understood and accepted the terms and conditions of this warranty for the purchase of this system and I hereby confirm the system as delivered to me is in good condition.

Date:

Signature:

TCAT COPY

TERMS AND CONDITIONS OF WARRANTY

This system is guaranteed against all defects in material and workmanship under normal use and service for a period of **3 years** or **100,000km** whichever is earlier from the date of vehicle registration.

This warranty is subjected to the following terms and conditions:

1. All servicing and repairing, if any, shall be carried out by TCEAS and its authorised workshops or service outlets.
2. Any warranty service or repairing will only be done upon presentation of a valid warranty book duly stamped or signed by any authorised Tan Chong representative.
3. This warranty does not cover any damage caused by improper or negligent use, accident, alterations or repair by unauthorised party or parties, hence no claims shall be entertained by TC Auto Tooling Sdn. Bhd. (TCAT).
4. This warranty does not cover the loss of the vehicle by theft, fire or accident.
5. Warranty shall be void if the security sticker on the module or the serial number printed on the circuit board of the transmitter is removed or defaced or if in the opinion of TCAT that it has been tampered with.
6. Any loss incurred in respect of items / contents placed in the vehicle will not be covered by the warranty and TCAT shall not be held accountable.
7. This warranty shall be limited only to cost of repair or cost of replacement of the defective parts and shall not cover any such other incidental costs incurred by the user.

INTRODUCTION

This vehicle is equipped with a high-level security system. It is recommended that even when the alarm is activated, it is good to take a series of precautions when the vehicle is left unattended.

- Never leave valuable belongings in the vehicle.
- Never leave the spare keys in the vehicle.
- Always try to park in a well-lit and safe place.

FUNCTIONS & OPERATION GUIDE

Arming the alarm system

The alarm system is armed when the Remote Control is used to lock the car.



2 Button Remote Type



Alarm LED Light

Press the lock button to lock the car. The turn signals will flash once, the alarm will beep once and the alarm LED will illuminate for 15 sec and then start flashing to indicate that the alarm system is armed.

Door ajar warning

If any of the doors/boot is ajar, all doors will not lock. The alarm will not sound and arm.

If the bonnet is ajar, all doors will be lock. The turn signals will flash once. The alarm will issue 3 beeps and then armed.

Disarming the alarm system

The alarm system is disarmed by unlocking the car using the “unlock button” on the Remote Control. The turn signals will flash twice; the alarm will issue 2 beeps and the alarm LED goes off to indicate that the alarm system is disarmed.

Note

If any door has not been opened within 30s of unlocking the car, all doors will automatically relock, alarm will beep once and re-arm itself.

Alarm activation

The system activates an alarm if the following unauthorised actions are carried out when the car is locked.

Opening of any doors



Opening of the back door

Opening of the bonnet



Switching on the ignition

The siren and horn is sounded and turn signals flash for approximately 30s per cycle up to a maximum of 10 cycles.

Switching off the alarm activation

The alarm can be switched off by pressing the unlock button on the Remote Control to unlock the car.

Alarm activation diagnostic

If an alarm had activated, upon unlocking the car with the mechanical key, the alarm will issue 4 beeps. You can diagnose the cause of the alarm activation by start the engine. Check the alarm LED display:

- 1 flash** - alarm activated by opening of a door/boot
- 2 flashes** - alarm activated by switching on the ignition
- 4 flashes** - alarm activated by opening of the bonnet

Note


LED display signals will be erased when the Remote Control is used to lock the car.

Emergency alarm system override

This feature is used if the Remote Control is not able to unlock and disarm the alarm system remotely.

Firstly, manually unlock and open the driver's door with the mechanical key - the alarm will trigger.

Insert the key into the ignition and start the engine - as soon as the engine is started, the alarm system is automatically disarmed.

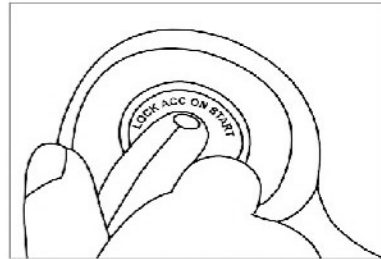

Insert the key into the ignition

NOTES

Back Cover

TC AUTO TOOLING SDN BHD

(A subsidiary of Tan Chong Motor Holdings Berhad)

249, Jalan Segambut, 51200 Kuala Lumpur

Email: enquiry@tanchonggroup.com

Tel : +603-6258 5266 Fax : +603-6251 4014

NV200Rev0