



Smart Electric Power Tailgate User Manual



Wireless Control



Auto/Manual Control



Height Adjustment



Multi-way Control



Audible Warning



Anti-pinch

To ensure proper functions, please read this user manual carefully before using this product and keep it in a safe place.

/// Introduction

- (1) This manual will provide you the function list and usage methods for this electric power tailgate system.
- (2) Pay attention to the warning and safety precautions explained in this manual.
- (3) Please follow the instructions closely to fully enjoy the convenience feature of the product.

/// Safety Precautions

- (1) In case of abnormal closing or opening of the electric power tailgate, please manually close or open it.
- (2) During the tailgate opening, do not force the tailgate to open or close manually.
- (3) High-pressure tensioning spring is installed in the electric spindle, do not disassemble without authorization.

/// Functions

★ **Wireless Control**

Using the original vehicle remote control, press and hold the boot release button for 1 second to open or close.

★ **Anti-pinch**

In the event the tailgate senses any impact/objects during closing, the tailgate will automatically open again.

★ **Height Adjustment**

You can easily preset the tailgate open height to suit the height of person using the vehicle.

★ **Auto/Manual Control**

This system is uniquely designed for this vehicle model, all buttons are placed at convenient locations for easy operation and reach.

★ **Audible Warning**

For safety purposes, a buzzer will sound during movement of the tailgate as warning sounds.

★ **Safety Operation**

For Safety purposes, the tailgate can only OPEN/CLOSE when the CENTRAL DOOR LOCK is UNLOCKED, GEAR in P and VEHICLE SPEED is 0 km/h.

Product Operation

★ Remote control for tailgate opening and closing

Use the original car key to control the tailgate closing and opening automatically.

Opening: Press and hold the boot release button on the car remote for more than 1 second to automatically OPEN the tailgate.

Closing: Press and hold the boot release button on the car remote for more than 1 second to automatically CLOSE the tailgate.

★ Back button control

1. Closing: press back button shortly once to close the tailgate automatically.
2. Stop: during the tailgate working, press the back button shortly once to stop the tailgate.
3. Tailgate opening (up): press the back button once, tailgate pauses; press the back button again, the tailgate closes downward.
4. Tailgate closing (down): press back button for once, tailgate pauses; press the back button again, tailgate opens upward.



Front Open/Close Button
(at Driver side)



Back button
(on the tailgate)

Product Operation

★ Front open/close button control


1. Opening: press the front open/close button and hold for 1s to open the tailgate automatically.
2. Closing: press the front open/close button and hold for 1s to close the tailgate automatically.

★ Height adjustment

To set the default tailgate height when opening, simply open the tailgate as normal. While opening, press the button on tailgate to stop the tailgate at the required height. Then, simply press and hold the button again for 3 s until 2 beeps are heard. The height is set and remembered the next time the tailgate is opened.

Caution: To prolong life of the electric poles, do not over stretch the opening of the tailgate.

Try to set the height of tailgate slightly below the maximum opening height.

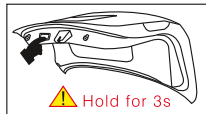

/// Tailgate opening/closing button definition

Button	Tailgate opening	Tailgate closing	Tailgate stop	Tailgate height adjustment
Back button	NA	Press once	Press once	Press and hold for 3s
Front Open/Close Button	Press and hold for 1s	Press and hold for 1s	Press once	NA
Remote control key	Press and hold for 1 s	Press and hold for 1 s	NA	NA

/// Notice

1. Design and publications of this user manual belongs to TCAT. All rights reserved.
2. TCAT reserves the right to edit, update the product and software at any time. The product is subjected to any change without notice.
3. TCAT reserves the right of final design on the interpretation of this user manual.
4. Current version: V1.0