

One-key gap reservation on all windows for ventilation.

Press Lock-Unlock-Lock in a row 15 seconds after window close upon car lock via remote control is finished, the windows will all sink by about 3cm, reserving gaps for safety of passengers and better ventilation.

Waiting mode.

Press Unlock-Unlock-Lock in a row after the car engine is turned off. The doors will then be locked with the windows being left opened, making it convenient when users are to wait for someone by the road.

Automatic folding of lock car

The flameout lock car is automatically folded to effectively prevent being rubbed by passing vehicles.

Unlock automatically

Unlock automatically unfold (optional unlock unfold or start unfold, press open-open-open with the key after flameout, 5 seconds later (within 10 seconds) Then press Open-Open-Open to switch to start the vehicle)



TC AUTO TOOLING SDN. BHD.



Embrace an easier lifestyle in your auto with an upgraded window switch system that knows you better

Instruction Manual

Learning Operation for the left front window.

Firstly, start the car engine, sink the left front window to the bottom by PRESSING the corresponding button, hold for 5 seconds(see Figure. 1), then LIFT the same button immediately until the window rises to the top, and hold for another 5 seconds(see Figure.2). The left front window will then automatically sinks back to the bottom, which indicates a successful learning operation for the left front window.



Double-gear AUTO function is available for buttons of all windows(Not controlled by operating period as it might cause inaccurate ONE-KEY operation of the windows)

Manual Window Lifting: lift the button to the first UP gear and loosen the button when the corresponding window rises to the preferred position.(see Figure.3)

ONE-KEY Window Lifting: lift the button to the second UP gear, the corresponding window will rise automatically to the top(see Figure.4). Out of protection for users, the left front window will sink, while the other 3 windows will hold the current position immediately, in the event of being blocked before reaching the top.

Manual Window Sinking: press the button to the first DOWN gear and loosen the button when the corresponding window sinks to the preferred position.(see Figure.5)

ONE-KEY Window Sinking: lift the button to the second DOWN gear, the corresponding window will sink automatically to the top(see Figure.6).

(Older models lift/sink windows automatically to the top/bottom when users lift/press the corresponding button for 0.3-0.5S. Inaccurate control of operating period usually ends in failure to lift/sink the windows to the preferred position, thus bringing unpleasant user experience, which is why we have made a great effort to develop the integrated window lifter)



Buttons of all windows are decorated with battens of electroplated finish(Not common black plastic buttons)



Battens of electroplated finish

All buttons(8 in total) are equipped with Neon(Not conventional buttons without Neon, making it difficult to locate the buttons when driving at night)



LED Neons (8 PCs)

Equipped with car lock folding selection key (traditional version does not have this selection key, customers cannot open or close)

1. Start the car Press and hold the "folding key" when the red light is on, cancel the folding function of locking the car, which is convenient to turn off automatic folding when it snows in winter;
2. Start the car Press and hold the "folding key" when the red light is off, turn on the lock folding function



Lock-up button.(Additional function: all windows can be closed after the car is locked, even when the lock-up button is activated)(For conventional version, only the left front window can be closed under the same conditions)



Auto window close upon car lock via remote control.

(Compatible with intelligent door handle)

- 1.Press the Lock button on the remote control after the car engine is turned off and all doors are closed. The windows will then be closed automatically.
- 2.Out of protection for users, the left front window will sink, in the event of being blocked for the first time in the lifting process to the top. The lifting will restart 3 seconds later. After that, the window will hold its current position if blocked again (The window will NOT sink when blocked for the second time).
- 3.Once the other 3 windows are blocked in the lifting process to the top, they will hold their current position but will not sink.(For security of your personal belongings in the car, please make sure all windows are properly closed before leaving the car when using the function of auto window close upon car lock via remote control)

Pause during window closing

The lifting can be paused by pressing the unlock button on the remote control when window close upon car lock via remote control is in process.

Opening window via remote control for heat dissipation.

Press Unlock-Lock-UnLock in a row 15 seconds after window close upon car lock via remote control is finished, the front windows will both sink for ventilation and heat dissipation in advance.

Pause during window opening

The sinking can be paused by pressing the lock button on the remote control when the windows are sinking via remote control.

Restart of Window close.

Window close can be restarted by pressing the lock button after pause during window closing/opening.

Maintaining preferred window position & Intelligent restart of Window Close

Press the lock button twice after the windows are sunk via remote control, the windows will then be lifted again for better ventilation and heat dissipation.

Please be noted that most of the applicable car models will re-lock the doors, if they have not been opened during the coming 60 seconds or so after being unlocked via remote control.