



# Installation of AVM Display Wire for Head Unit (Clarion)

1



Open the top panel as shown.

2



Open the screw X1.

3



Open and remove the radio fascia.

4



Open the screws X4.

5




6



Open the LH/RH air pillar panel as shown.

7

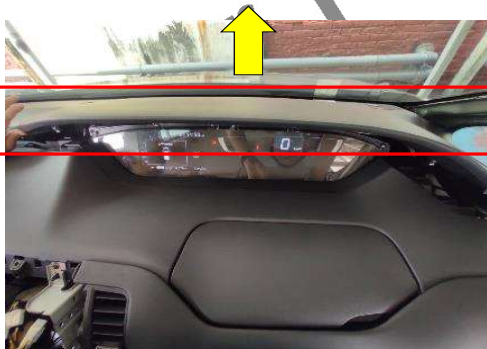

Open the dashboard panel as shown.

8



Open the panel as shown.




# Installation of AVM Display Wire for Head Unit (Clarion)

9



Open the screws X4.

10

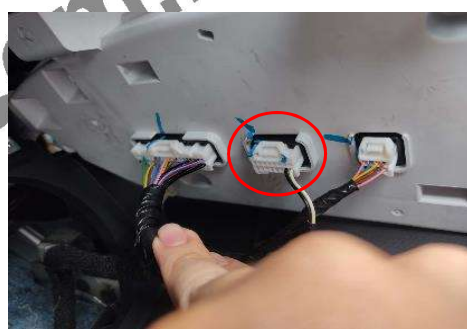

Disconnect the connector as shown.

11

Connect with supply T-joint wire.




12




Route the T-joint wire to the radio head unit.

13

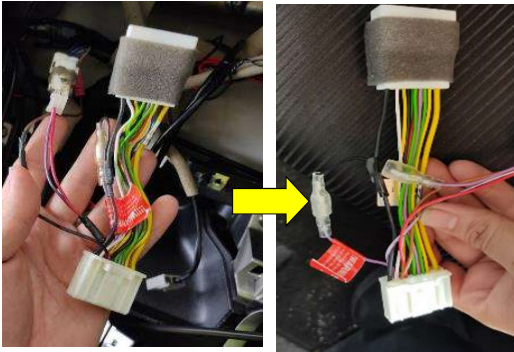

Replace the OE conversion wire with supply wire.

14

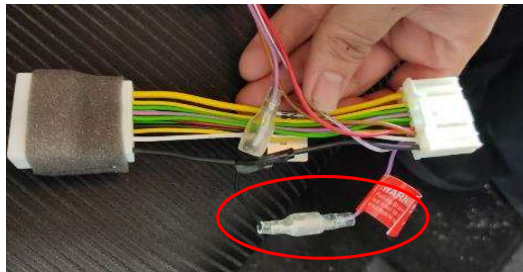

Connect the Bullet terminal (Black to purple)  
Noted: For playing video purpose.

15

Connect the T-joint wire connector to head unit.



16

Reinstall all the parts in the reverse order of removal.  
After reassembly has been completed, make sure each part functions correctly.