



# Installation of AVM Display Wire for Head Unit (Android Radio)



Open the top panel as shown.




Open the screw X1.



Open and remove the radio fascia.




Open the screws X4.

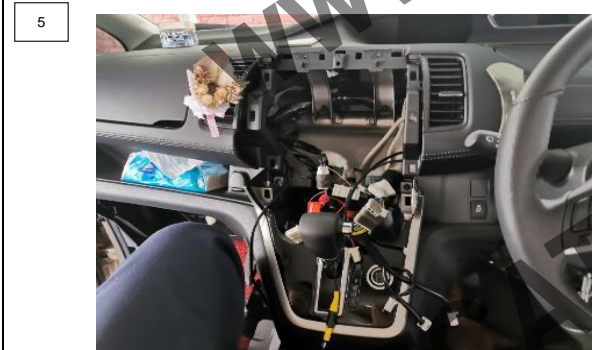

Open the LH/RH air pillar panel as shown.



Open the dashboard panel as shown.

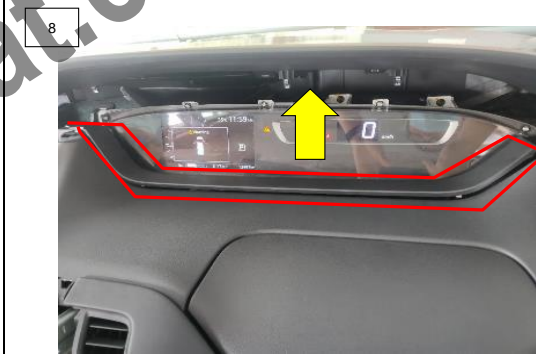


Open the panel as shown.




# Installation of AVM Display Wire for Head Unit (Android Radio)

9



Open the screws X4.

10

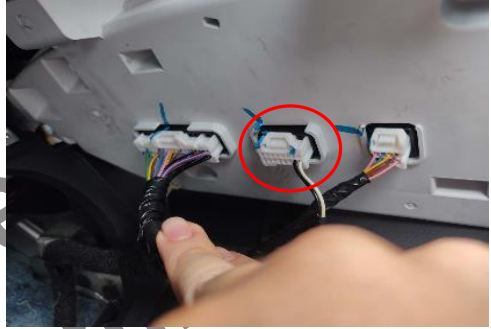


Disconnect the connector as shown.

11

Connect with supply T- joint wire.




12

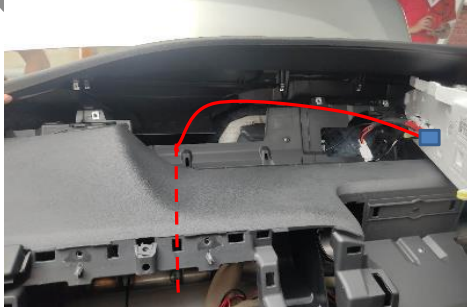

Route the T- joint wire to the radio head unit.


13



1	2	3	4	5	6
7	8	9	10	11	12


Note : TAP the supplied Brown wire to the 12 pin connection at Pin No.10 Brown wire

14



Note : TAP the other end of supplied Brown wire to theBACK/Reverse detection of the radio

15

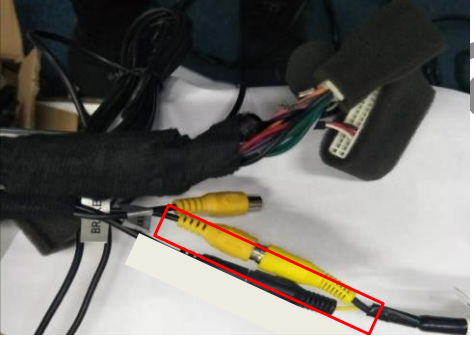

Note : insert the Yellow video connector to the radio Reverse camera connector

Reinstall all the parts in the reverse order of removal.

After reassembly has been completed, make sure each part functions correctly.